ULTRACKER

REKA

by Nexans

ACCOUNT ACTIVATION AND LOGIN

Once your user account has been created, you will receive an activation notification by email and a request to create a password.

The account is available for use immediately after activation.

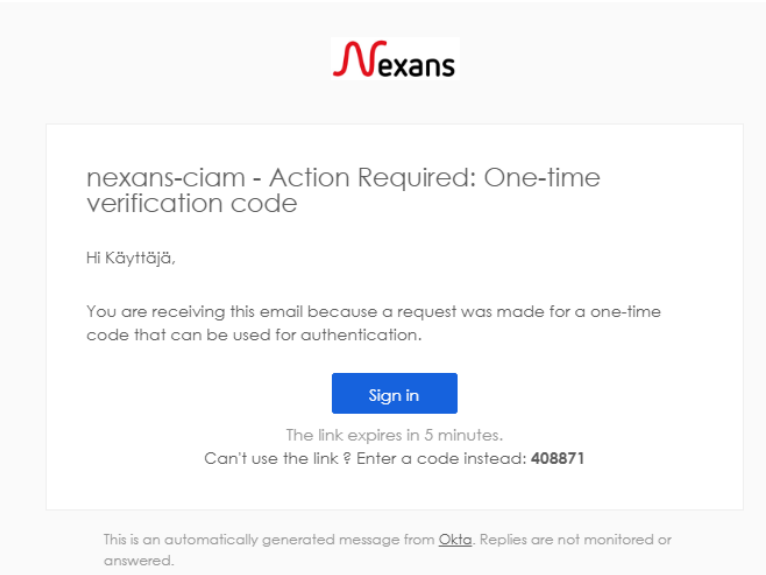

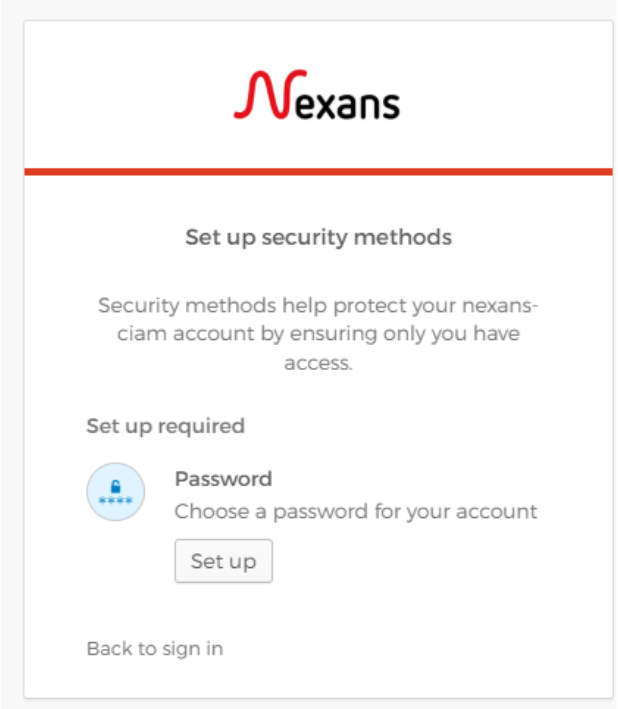

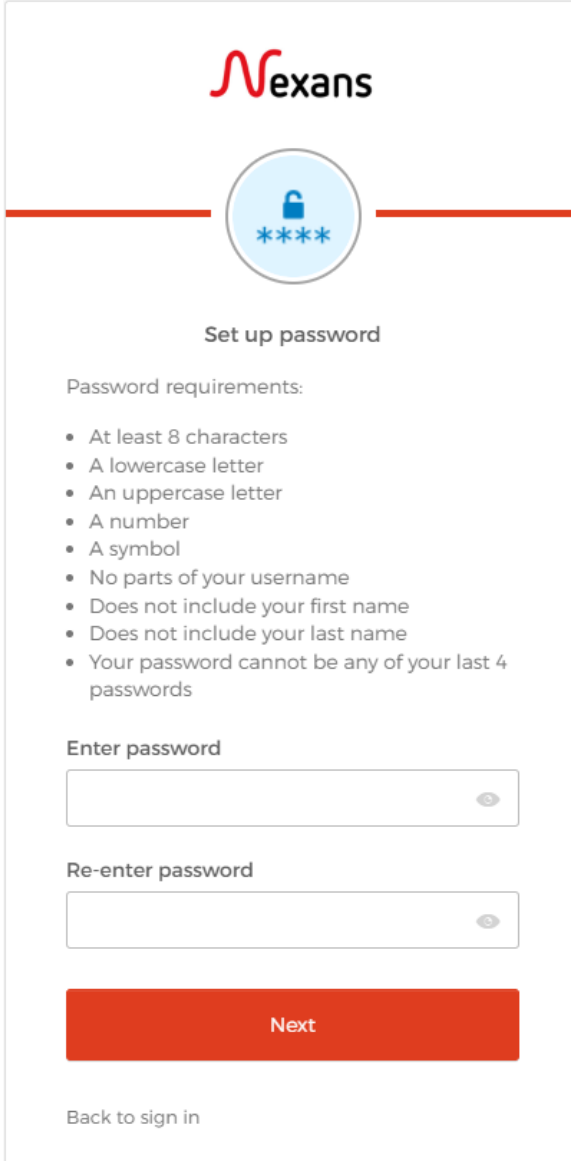

The mobile app can be downloaded from the Play Store and App Store.
Allow the app to use your camera and location in your phone's app settings.

Log in to the app with your username (email address). You will receive a confirmation request, which sends a six-digit code to your email. **Use this code to log in** at: Enter the code from your email. (Don't use Sign in link from e-mail)

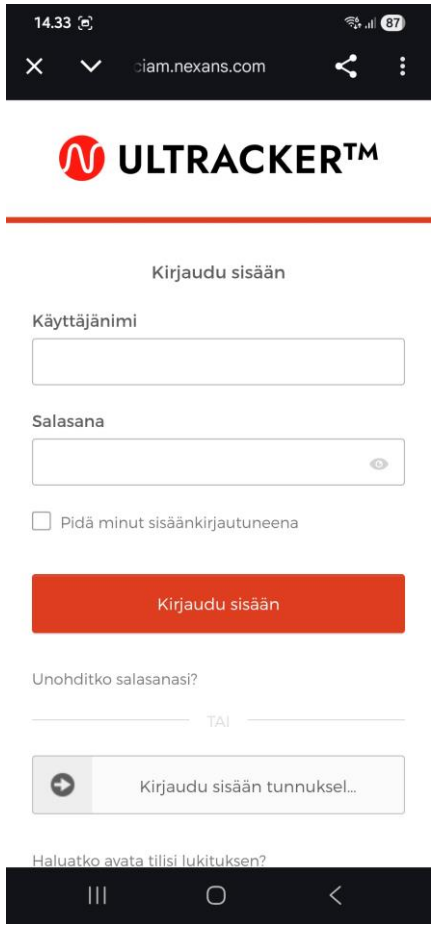

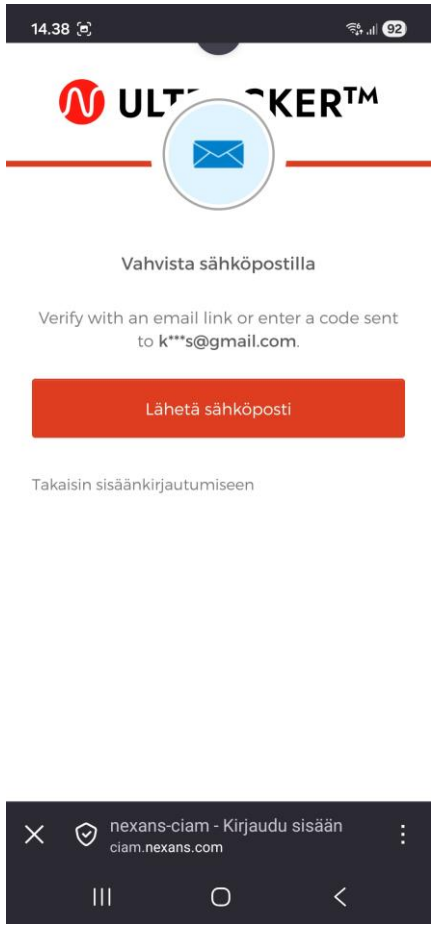

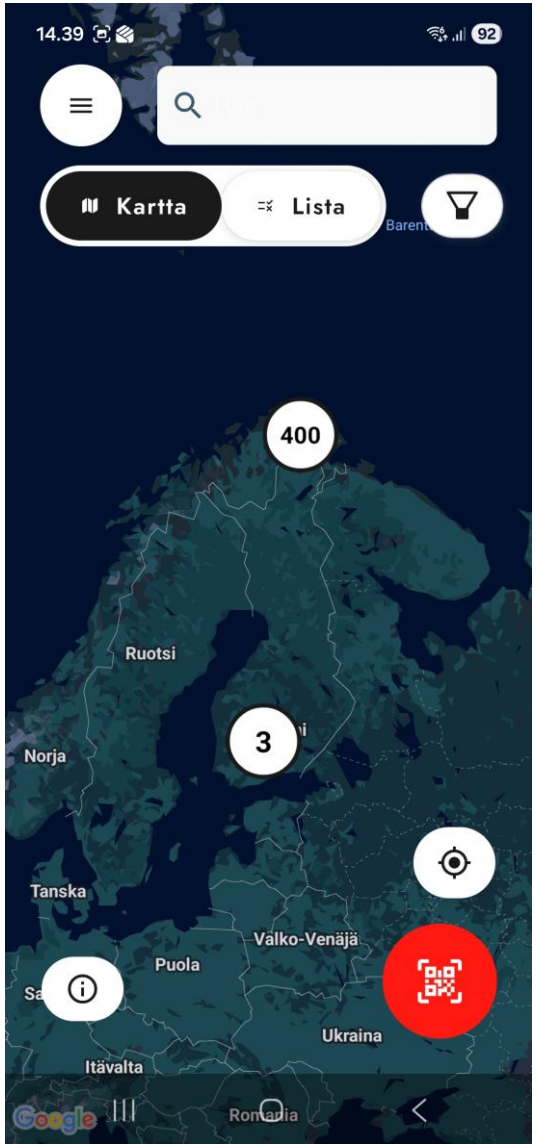

The program's start view is a map showing the location and number of drums.
The list opens the drum list.

The circle with three lines in the upper left corner opens the program menu.

From the map view, you can search for drums by first selecting the QR code icon at the bottom and scanning the drum or entering the drum number.

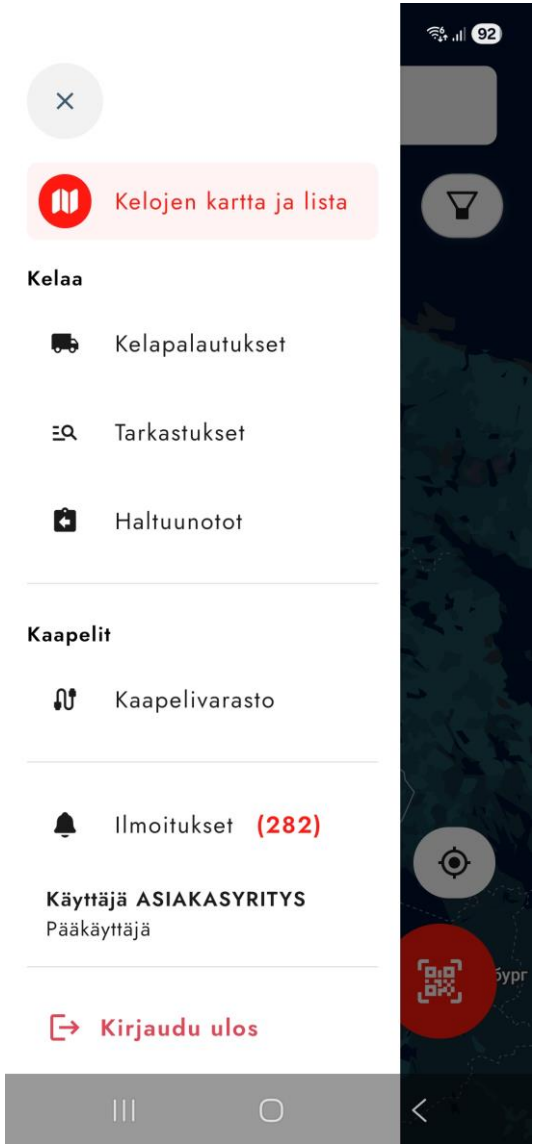

If you close the app without logging out, the program remains available without new login confirmations.

Login to the web application is done at: ultracker.nexans.com

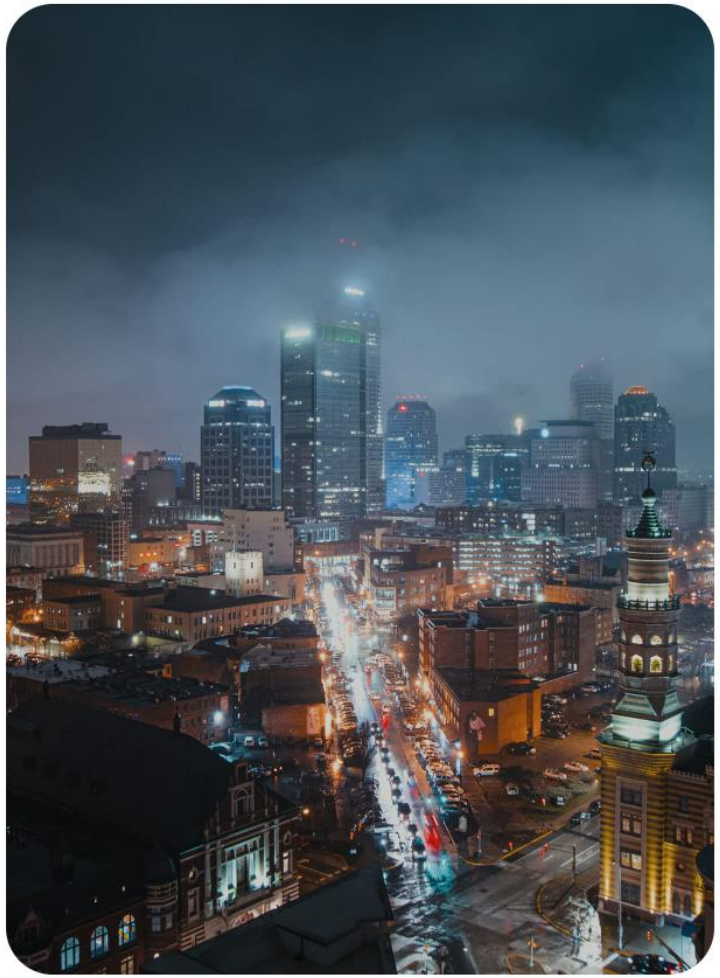

REKA by Nexans

ULTRACKER™

Welcome back

Sign in to access your Ultracker account

Log In

Help

After entering your login details, you will receive a confirmation request at your email address (username). Send the request. You will receive a six-digit code, which you use to log in by selecting Enter a code.

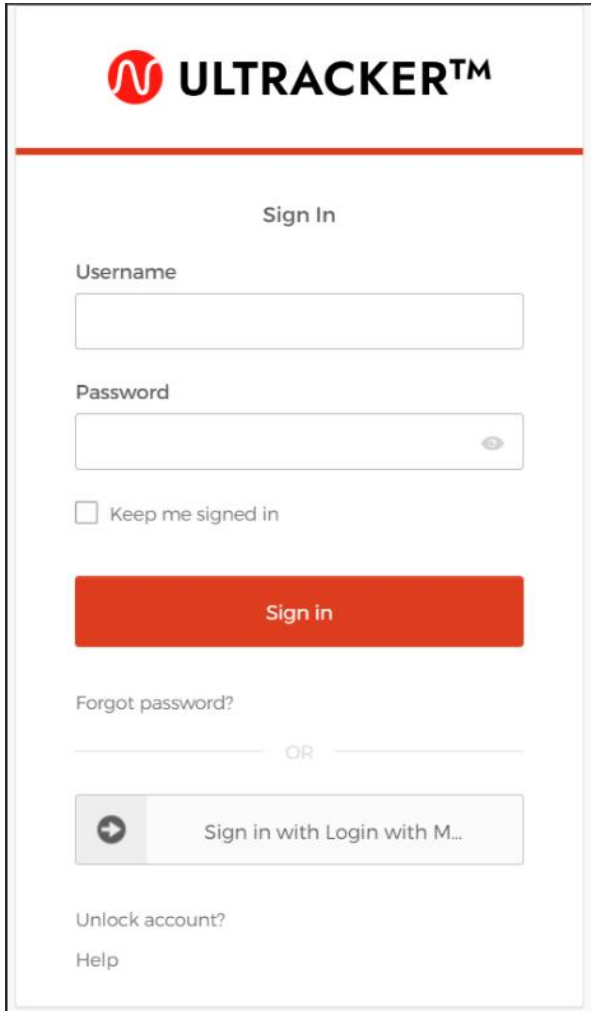

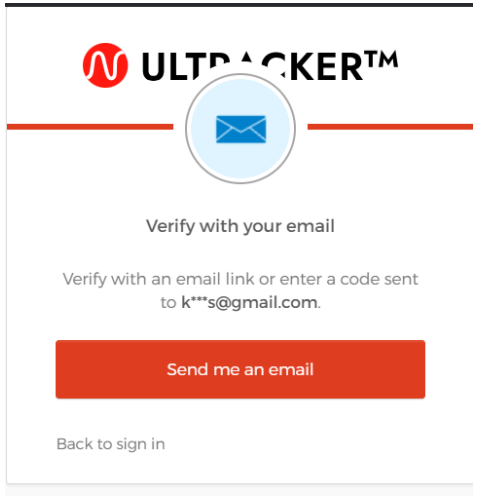

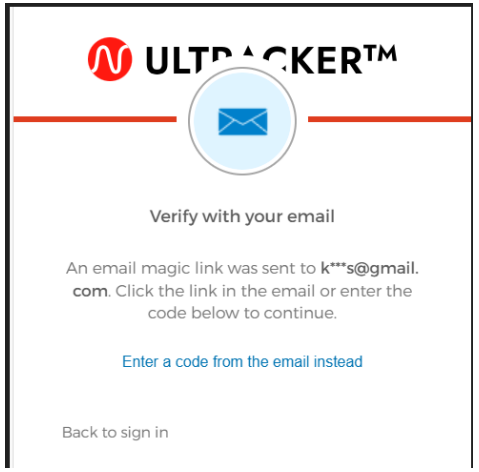

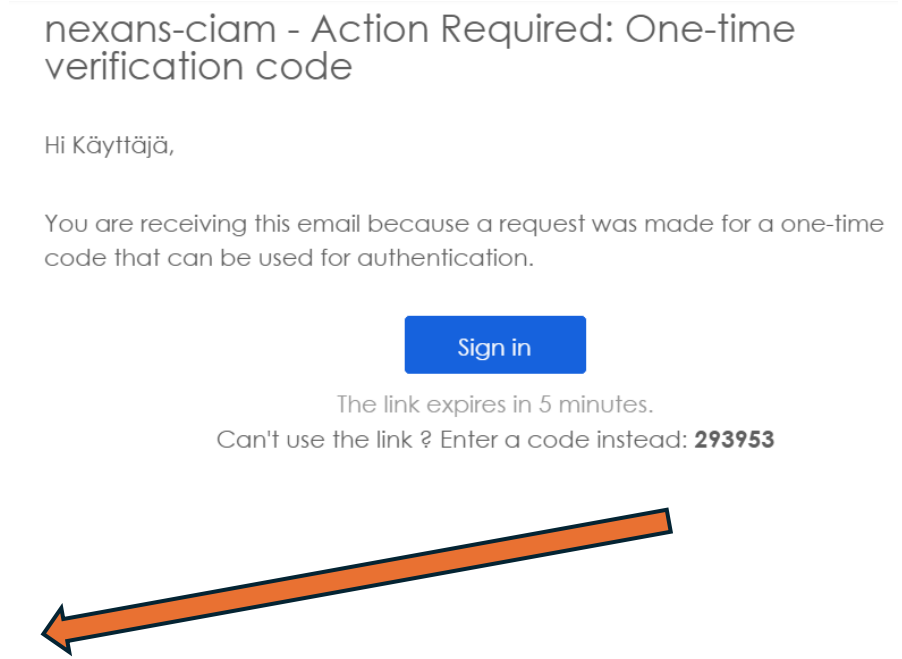

By adding the site to your favorites after logging in, you can avoid new account confirmations.